Assembly Instructions
and maintenance recommendations

Cooker Hoods

CS-6000Using this instruction book

Montageanleitung und Pflegehinweise

Dunstabzugshauben

CS-6000

Instructions d’installation
et recommandations d’entretien

Hottes aspirantes

CS-6000

Safety instructions

Dear Customer:

Thank you for choosing our cooker hood.

We are sure that appliance you have acquired will fully satisfy all your needs.

This model is made using top quality materials and undergoes rigorous testing throughout the manufacturing process.

Read this manual carefully before installing or using the product and faithfully follow the instructions in order to guarantee optimal performance of the appliance for many years.

Keep this instruction book in a safe place so that you can consult it whenever necessary and fulfil guarantee requirements.

Before using your hood for the first time, please take note of the installation and connection instructions.

Never unplug your hood by pulling the power cable, always by removing the plug from the socket.

Never switch the hood on if the electrical feed cable is in a state of disrepair or is cut, or if the appliance shows visible signs of wear on the part where the controls are found.

If the hood stops working or works abnormally, disconnect it from the mains (unplug) and inform the Technical Assistance Service.

Do not leave gas burners turned on under the hood without their being covered by a recipient such as a pot or pan.

Do not allow grease to build up on any part of the hood, especially on the filter. TO DO SO WOULD CONSTITUTE A FIRE HAZARD.

Do not flambé food underneath the hood.

Índex

Description of the appliance **page 4**

Special requirements before use for the first time **6**

How to use the appliance **6**
Motors 6
Light switches 6

Suggestions and recommendations **7**

Cleaning and maintenance **8**
Cleaning the filter 8

Cleaning the filter support and the hood body **8**
Carbon filter 8
Grill and ventilator cleaning 9
Changing the light-bulbs 9

If something does not work **10**

Technical Information **11**

Installation **12**
Upper Outlet 14
Re-circulation through activated carbon 14
Changing the mains cable 15

Description of the appliance

These hoods are fitted with

A Light-switch

B Sliding three-speed motor control switch

C Operation indicator light

D Controllable visor that enables better smoke collection (gases)

E Filter body and supports

F Filter support closures

G Light-bulb illumination, over the cooking area and set behind a light diffuser

K Easily extractable filter fitted in the lower part of the suction surface (optional)

H & I Anti-return fins (H), included in the bag with the appliance documentation. These are fitted a at the mouth of the outlet with their ends fitted in the holes prepared to house them (I).

J & K Grill and ventilator that can be removed for cleaning.

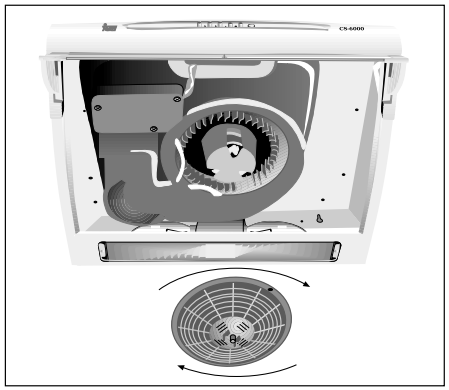

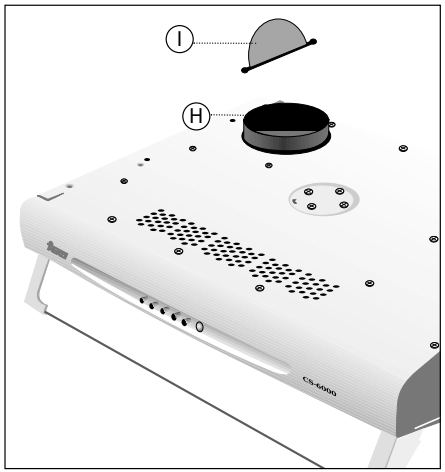

The hood in designed in the evacuation of gases to the outside, or for his movement thrugh carbon filter. The allow that gases can retum to the kitchen, purified.

For place the carbon filter, the anchorage of motor must coincide with the anchorage of carbon filter, and we fix in turning it in the sense of the hands of the clock.

Life of de carbon filter is theree to six months, depending on particuler conditions of use.

To replace old filters, we do it in reverse sense to the instalation.

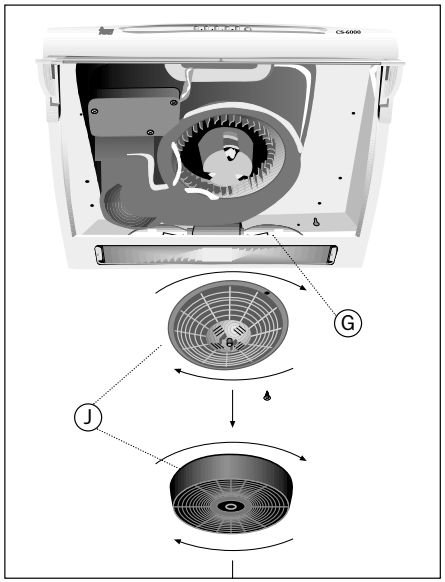

Special Requirements before using for the first time

Before connecting the hood to the electricity mains, make sure that the mains voltage and frequency correspond to the values indicated on the rating plate inside the hood.

How to use the appliance

Motors

Use the controls on the frontal part, switching them to the required suction speed. The hood motor has three speeds and a pilot to indicate operation of any of them:



0. Off position
1. First speed
2. Second speed
3. Third speed

Light-switch

This is independent of the motor. This enables the lights to be used regardless of whether the hood is in use.

Off

On

Suggestions and recommendations

- **Switch on the extractor fan a few minutes before you start to cook (3 to 5 minutes) in order to ensure that a steady air flow has been established before cooking fumes appear.**

- **Allow the extractor fan to run for several minutes after you have finished cooking (3 to 5 minutes) in order to expel all the grease from the outlet duct. This prevents the return of grease, smoke and smells.**

Cleaning and maintenance

BIFORE CLEANING AND MAINTENANCE, BE SURE THAT THE APPLIANCE IS DISCONNECTED FROM THE MAINS SUPPLI.

Limpieza del Filtro

- Open the filter support by moving the closures.
  Remove the support: take special care to avoid dropping it.
- Remove the filter by pulling it out and proceed with cleaning, either in a dishwasher or leaving it under hot running water, cleaning it with a non-abrasive brush.
- It should be dried once cleaning is completed.

NOTE: Cleaning in a dishwasher with strong detergents may darken the metallic surface without affecting its grease retaining performance.

WARNING: Filter cleaning should be carried out at least once a month, depending on the extent of hood use.

It should be remembered that grease accumulates in the hood and in the filters even though it is not switched on.

Cleaning the filter support and the hood body

- Soapy water at a temperature of about 40°C is recommended. A damp cloth is used with this water for cleaning the hood, paying particular attention to crevices. It should then be dried using a dry cloth that does not leave any fibres.

WARNING:
- Never use metallic scourers.
- Do not use abrasive products that may damage the metallic surface.
- Do not scratch with hard objects such as knives, scissors, etc.

Carbon filter

The activated carbon filter cannot be washed or regenerated. Once it has become soiled (obstructed) it must be replaced (A).

Cleaning the grill and ventilator

Wait for the motor to cool before carrying out this operation.
- Remove the screw that holds the grill to the support.
- Turn the grill in an anticlockwise direction.
- Using a pair of pliers, situate the ventilator bolt over the axle.
- Clean the grill and ventilator and then dry them.
- To fit the ventilator, place the axle in the bolt as far as it will go and then press it in.
- Fit the grill by turning it clockwise.

WARNING:
The hood should never be switched on without the grill. Non-compliance with this warning shall be the sole responsibility of the user when faced with a damaged appliance.

Changing the light-bulbs

- Remove the filter support to access the light bulbs (B).
- Make sure that the hood has previously been disconnected from the mains supply and that the bulbs to be replaced are not hot.
- The maximum bulb power is 40 W.

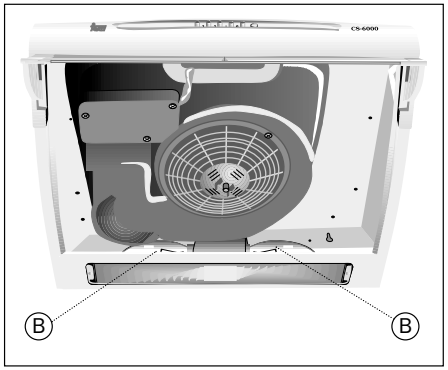

If something doesn’t work

Before calling the repairs service, make the following checks:

Fault	Possible	causeSolution
The hood doesn’t work		
	Mains cable not connected	Connect mains cable
	Power not reaching plug	Check/repair mains supply
Hood not extracting sufficiently or vibrating		
	Filter saturated with grease	Clean or replace filter
	Obstruction in venting duct	Remove obstruction
	Inadequate venting duct	Contact installer and follow the instructions in this manual
Lights do not work		
	Bulbs blown	Replace bulbs
	Bulbs loose	Tighten up bulbs

Technical information

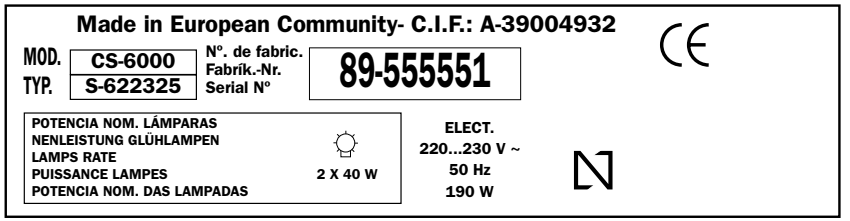

Dimensions (mm)	Voltage	Frequency	Maximum load
600 (900) x 500 x 150 Width x length x height	SEE CHARACTERISTICS LABEL		

Installation

Before installing the hood, consult the requirements of the appropriate authorities concerning air and smoke extraction regulations.

Extracted air must not be channelled through ducts used for exhaust fumes from appliances powered by any form of energy other than electricity.

The room (kitchen) must be well ventilated if the extractor hood is to be used at the same time as other extractor fans or other appliances powered by any form of energy other than electricity.

When the hood is to operate at the same time as other appliances powered by any form of energy other than electricity, the air output pressure must not be more than 4 Pa (4 x 10-5 bar).

To ensure optimum hood performance, the length of the venting duct should not exceed four metres and should not have more than two right angles (90°).

If the hood is supplied without a plug for mains connection (or if this is replaced), it must be disconnected from the mains by means of an omnipolar cut-off switch, with a minimum contact separation of 3 mm at all the poles, incorporated into the fixed installation.

The installation connection should be carried out using flexible wire. It must not be done using a rigid tube.

The hood should be connected to an earthed electrical installation.

The lower part of the hood should be placed at a minimum height of 60 cm above the hob for electric cookers and 70 cm for gas cookers.

Although it is recommended that gases be extracted to the exterior, active carbon filters may be installed. This enables the gases to return to the kitchen through the outlet.

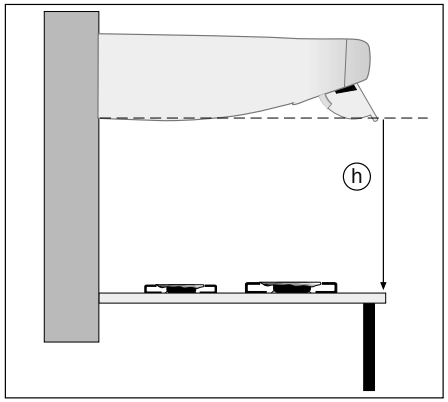

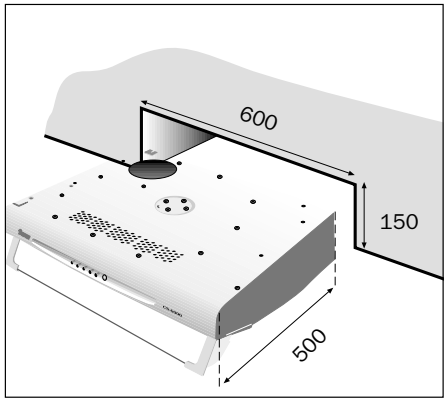

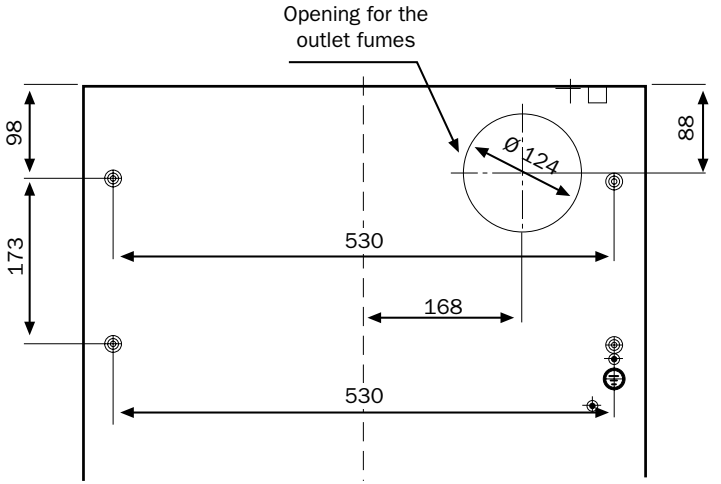

TEMPLATE FOR ASSEMBLY UNDER FORNITURE

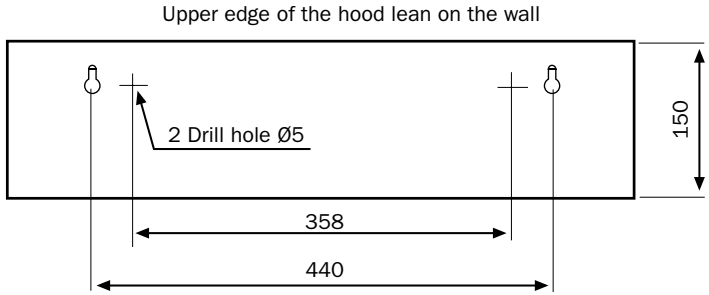

TEMPLATE FOR ASSEMBLY ON THE WALL

Extraction through the upper part (A)

The system requires an outlet conduit.

The gas extraction lever should be set in the position <<E>> situated in the casing.

An outlet tube (non-return) is fitted, checking to ensure that the other outlets are duly covered.

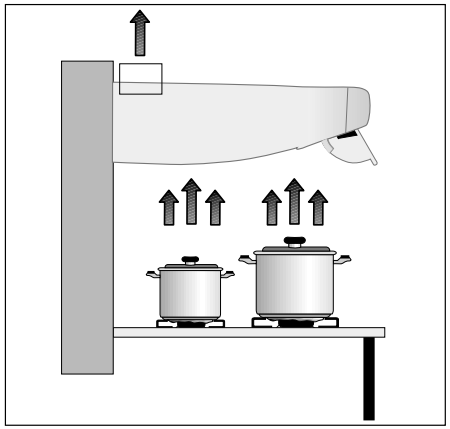

Re-circulation through active carbon

Place the lever situated in the casing in the position <<I>>, ensuring that the round cover is placed over the opening (A).

The active carbon filter is then placed in the suction mouth.

If the kitchen is fitted with furnishings such as wall cupboards, the hood may be placed directly underneath them by using the set that is drawn on the following page. If gas extraction is required through the hood's upper outlet (A), then a sufficiently large orifice should be left for the gas outlet pipe to be fitted.

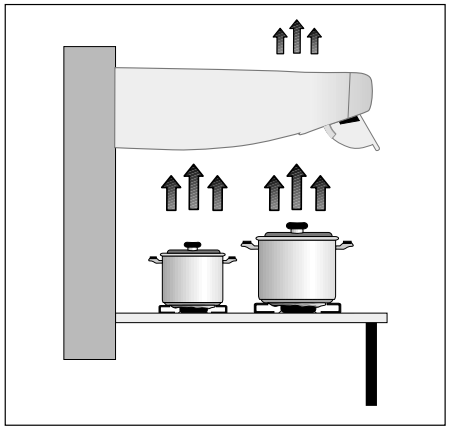

Replacing the mains cable

- Ensure that the hood is disconnected from the mains supply.

- Open the electrical connections box, removing the screws securing its cover, and release the mains cable safety retainer.
- Loosen the screws on the terminals marked N, L and ⏚ remove the four screws which secure the intermediate unit to the chassis and guide the new cable to the drillhole in the connections box, connecting the blue wire to the N terminal and the brown wire to the L terminal ⏚.

If the external cable is of a diameter greater than the one supplied, entry to the connection box is achieved by pressing its side, breaking the lower thickness plastic area that has been prepared for cases like this, and cutting off any remaining burrs.